



DEWATERING DISCHARGE IN WELL VEGETATED UPLANDS

NOTES:

1. PUMP INTAKE HOSE MUST BE SECURED AT LEAST ONE FOOT ABOVE THE TRENCH BOTTOM.
2. IF VEGETATION IS SPARSE, DEWATER INTO GEOTEXTILE FILTER BAG OR STRAW BALE DEWATERING STRUCTURE.

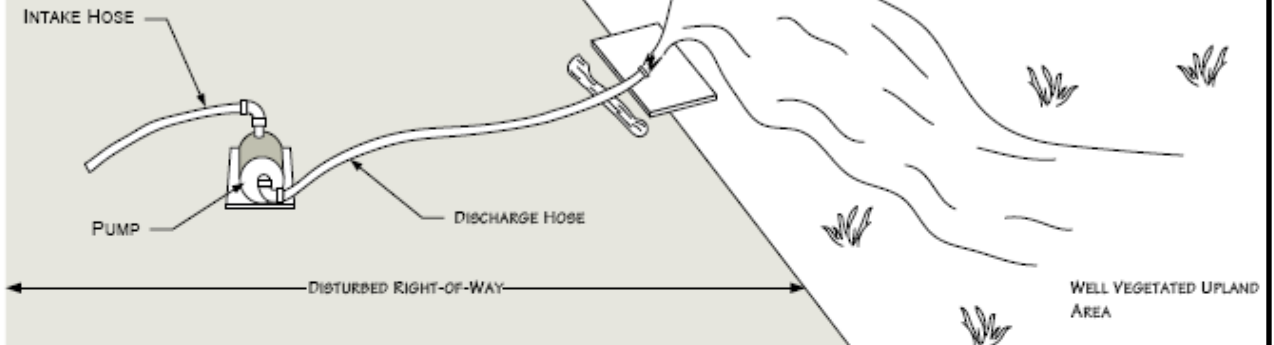

GEOTEXTILE FILTER BAG

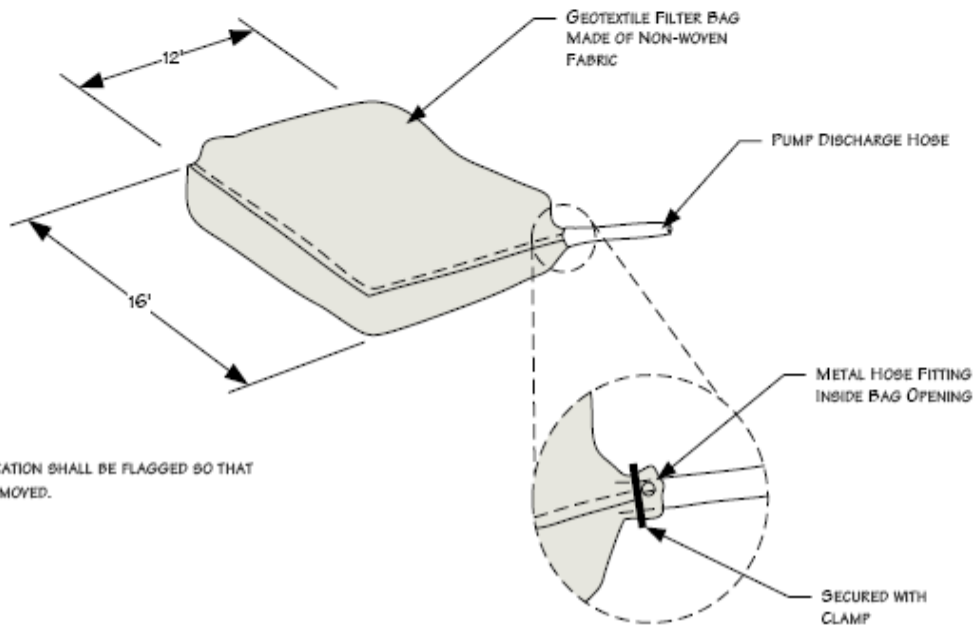

NOTE:

1. FILTER BAG LOCATION SHALL BE FLAGGED SO THAT BAG CAN BE REMOVED.



Hiland Operating, LLC
 205 West Maple, Ste 1100
 Enid, Oklahoma 73701
 508-242-6040

Figure 6.2.7– Typical Dewatering Measures

6-inch Natural Gas Residue Pipeline
 January 2013